



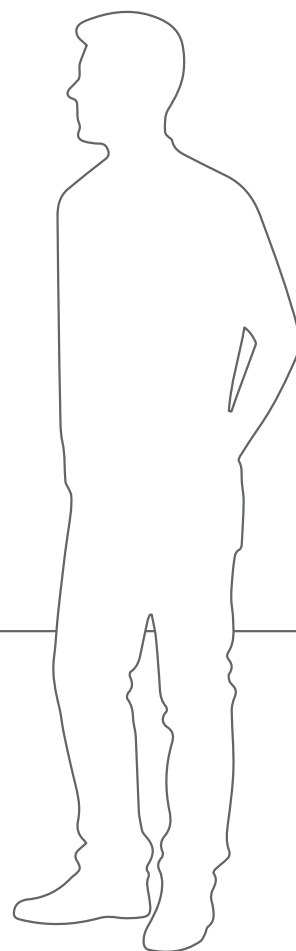

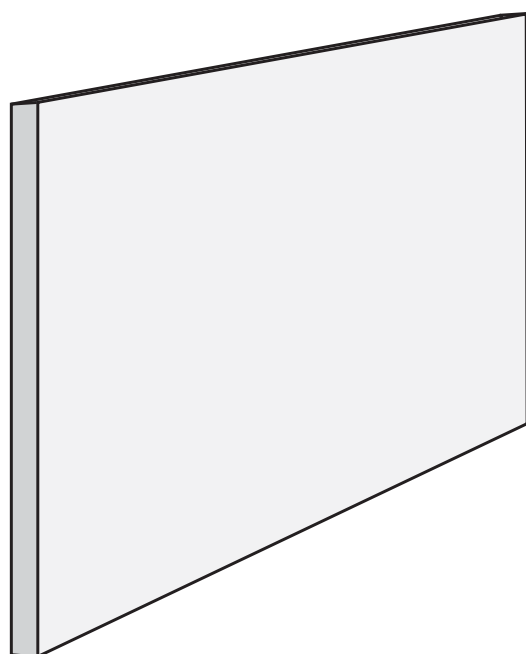


INSTALLATION GUIDE | **SINGLE FRAME – SMALL** | 900x600 – 1200x2100 mm


Rockfon Canva® Wall panel




Tools	Drill	Driver	Tape	Laser	Level
					

Installation (4 steps in total)


- 1 Mount the wall brackets using screws.

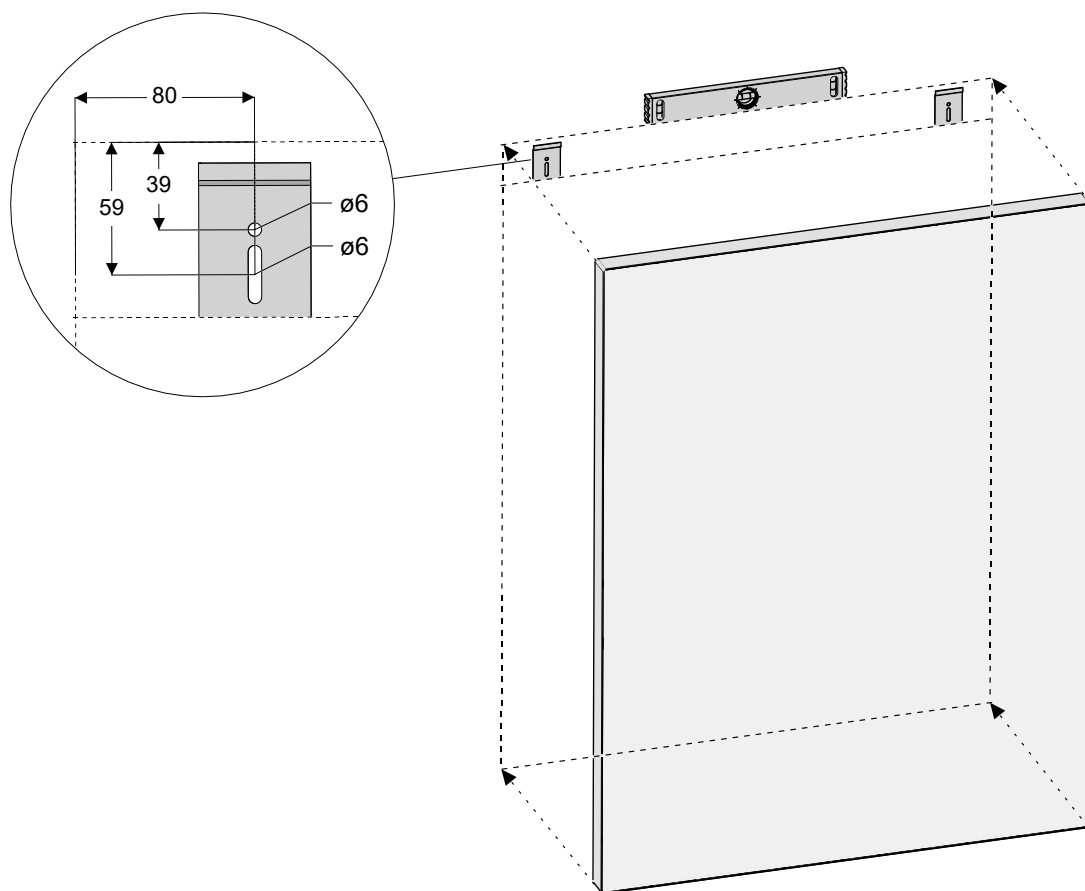

- 2 Mount the wall panel on the wall brackets.

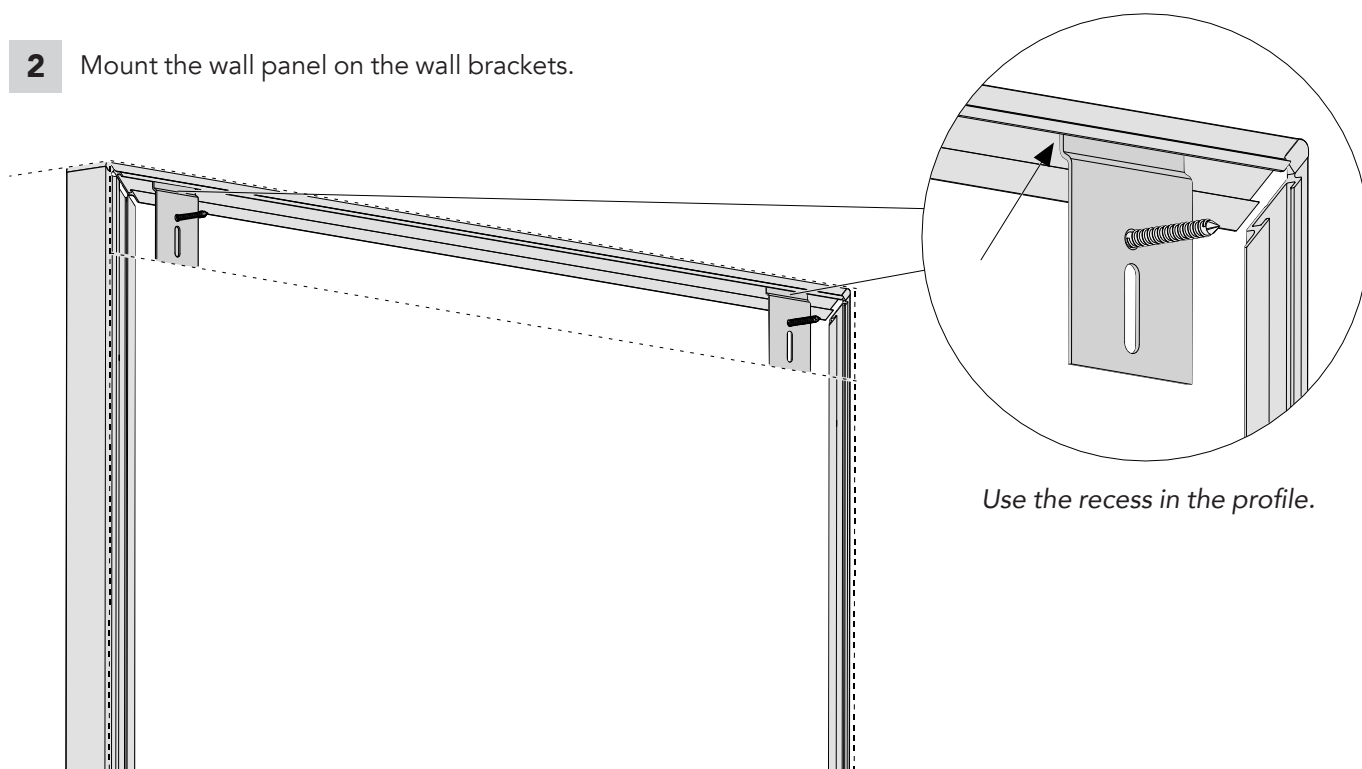

- 3** For secure installation, pull the tag to lift the canvas.

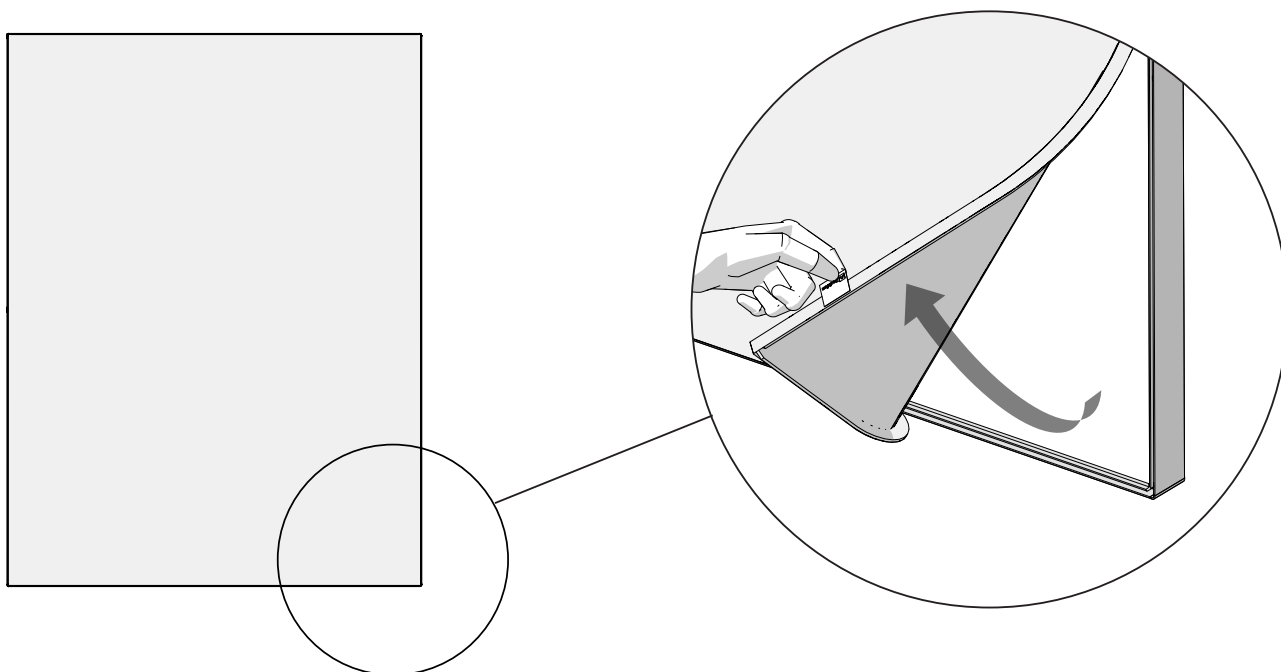

- 4** Drill through the absorber and profile. Secure the panel to the wall using screws.

